

IMN TP PVC

MAGNETIC LEVEL SWITCH



General	Operating principle	The IMN level magnetic sensors are based on the action of a reed switch located inside the tube, which is activated by a magnet housed inside the float and moves due to the thrust of the liquid.			
	Application	· For the detection of one or more points in liquid level. · Used in maneuvers for filling, emptying, overflow alarm, etc.			
	Manufacturing	Are customized to suit the installation conditions.			
Housing	Electrical connection	By cable. Length 1 meter. Others lengths on request.			
	Cable material	PVC			
	Temperature (T _a)	70			
	Nr. maximum cables	7			
	Cable gland	PG 7			
Ø Cable hose (mm)	3..6,5 mm				
Body	Guide tube	100..1000 mm. Ø12 mm. PVC (FCPP04M14) 1000..3500 mm. Ø16 mm. PVC (FCPP05M18)			
	Temperature	-10..+60 °C			
	Mounting position	Vertical, ±15°			
Process connection	Thread	1" G	1"1/4 G	1"1/2 G	2" G
	Material	PVC			
	e/c (mm)	36	46	55	64
	LR (mm)	19	21		26
	LCP (mm)	15	16	17	
	Be tempted to float is narrower than the width of thread				
Floats	Model	FCPP04M14	FCPP05M18		
	Material	PP			
	Dimension (mm)	Ø 29x50	Ø 38x60		
	Pressure (kg/cm ²)	3			
	Density (g/cm ³)	e > 0,6	e > 0,5		
	FS / FH (mm)	20 / 30	30 / 30		
Contacts	Nr. of contacts	1.3 (guided tube Ø12 mm) 1.5 (guided tube Ø16 mm)			
	Class	NO: 120 WVA / 250 VAC-3A NC-NO/NC: 60 WVA / 230 VAC-1A			
	Distance between them	> 40 mm			
Protection	Standard	Normal execution without inner filling. Applicable to most applications.			
	Protected	Anti-condensation effect. In installations where there are large temperature differentials.			
	Insulated	Filled with epoxy resin. Establishing a higher degree of tightness.			

How to determine the sensor settings

Determine the total length according to the characteristics of the shell and the liquid level to be controlled.

According to the maneuver you wish to perform, determine the amount, location and type of contacts. Use the table below to define these characteristics.

Contacts: To set the type of contact (NO, NC, NONC) should be without the presence of the float. For example, if you want the lower end of the sensor contact opens when the tank runs out of fluid, seek an NC contact for the position.


Direction of action (↑ ↓): Set the direction of action of the float (the filling or emptying) allows more precise adjustment of the position of the contacts to the point of desired performance.

Electrical connection: If not otherwise specified explicitly, provide a common connection to all the contacts and an active connection for each of them, according to the diagram below.

Additional floats: The sensor comes equipped by default with a single float, the lower stop and if required, the upper stop. Can request as many additional floats as many contacts as necessary.

Conditions of work: Check that the conditions of pressure, temperature and density of your system match those offered by the model chosen. If you have questions regarding the behavior of materials in contact with the liquid you want to control, see chemical resistance chart on our website.

Apart from the possibilities listed here, there are others such as other floats, various electrical connections, etc. For any of these combinations refer to our document, "Connections and schema IMN" section in our website.

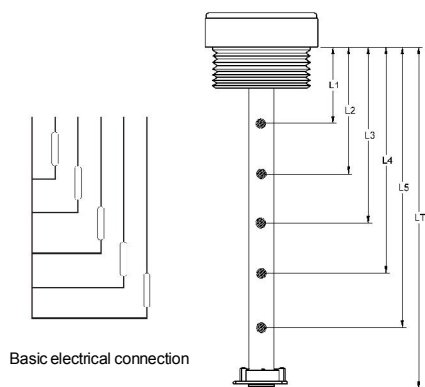

	mm	NO	NC	NONC	↑	↓	Stop
L1							
L2							
L3							
L4							
L5							
LT							

Use this document to define the data of sensor and attach it at the time of ordering. Specify in mm. total length of the sensor.

Specify in mm. the position of each of the contacts used in your application. Place an "X" the type and direction of action of each contact.

In the case of using additional floats, mark an "X" between what contacts should be placed caps separators.

In the composition table references check boxes next to the selected features.

REFERENCE	VERSION	PROCESS	FLOAT	TOTAL LENGTH	Nr. CONTACTS	Nr. FLOATS
IMN TP PVC	<input type="checkbox"/> V1 Standard	<input type="checkbox"/> P06 1"	<input type="checkbox"/> F51 FCPP04M14	L 100..3500 mm	<input type="checkbox"/> C1 1 contact	<input type="checkbox"/> N1 1 float
	<input type="checkbox"/> V2 Protected	<input type="checkbox"/> P07 1" 1/4 G	<input type="checkbox"/> F52 FCPP05M18		<input type="checkbox"/> C2 2 contacts	<input type="checkbox"/> N2 2 floats
	<input type="checkbox"/> V3 Insulated	<input type="checkbox"/> P08 1" 1/2 G			<input type="checkbox"/> C3 3 contacts	<input type="checkbox"/> N3 3 floats
		<input type="checkbox"/> P10 2" G			<input type="checkbox"/> C4 4 contacts	
					<input type="checkbox"/> C5 5 contacts	

To compose a reference, select an option from each of the columns. Example: IMN TP PVC V1 P08 F51 L500 C1 N1

Installations advise	Installation in areas with turbulence
<p>If the tank is metal walls, the probe will separate from them at least 100 mm.</p> <p>The maximum slope should be ±15°</p>	<p>Place the sensor as far as possible from areas of turbulence.</p> <p>Still pipe. Protects the race of the float of the turbulence.</p> <p>Separating wall or discouragement.</p> <p>PSIA, DSIA relay: Differential control of max. and min. by timing.</p>

ELECTRICAL CONNECTION EXAMPLES

1 CONTACT



CNX43





CNX44




CNX45

  
5 CONTACTS




2 CONTACTS

 


CNX46

 


CNX47

 

CNX48

 


CNX49

 

CNX50



 CNX51



CNX52

3 CONTACTS



CNX54



CNX55



CNX56




CNX57




CNX58



 CNX59



CNX60

 

CNX61



CNX62




CNX63



CNX64



 CNX65




CNX66




CNX67

 
4 CONTACTS




CNX69

 


CNX70

 


CNX71

 


CNX72

 

CNX73

 


CNX74

 


CNX75



 
CNX76




CNX77

 


CNX78

 


CNX79

 


CNX80

 

CNX81

 

CNX82

 


CNX83

More information regarding, in "Utilities / Tables" on our website (www.disibeint.com)

APPLICATION EXAMPLES


1 CONTACT

CONTROL TO ONE MAXIMUM OR MINIMUM LEVEL

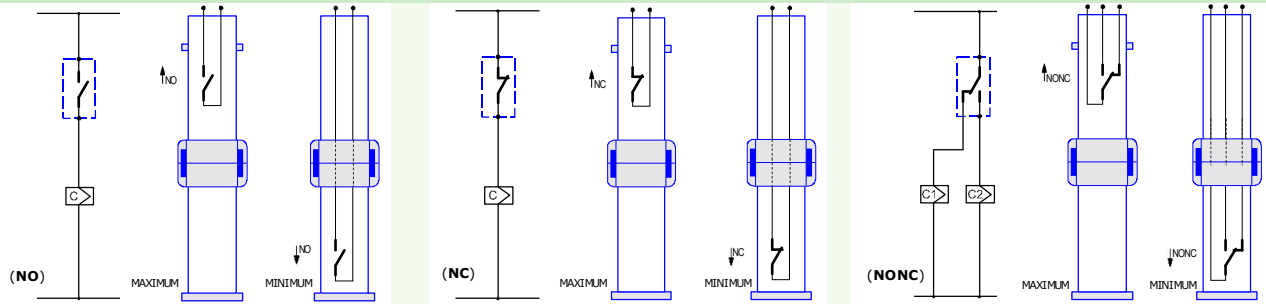


2 CONTACTS

START-STOP WITH INTERLOCK

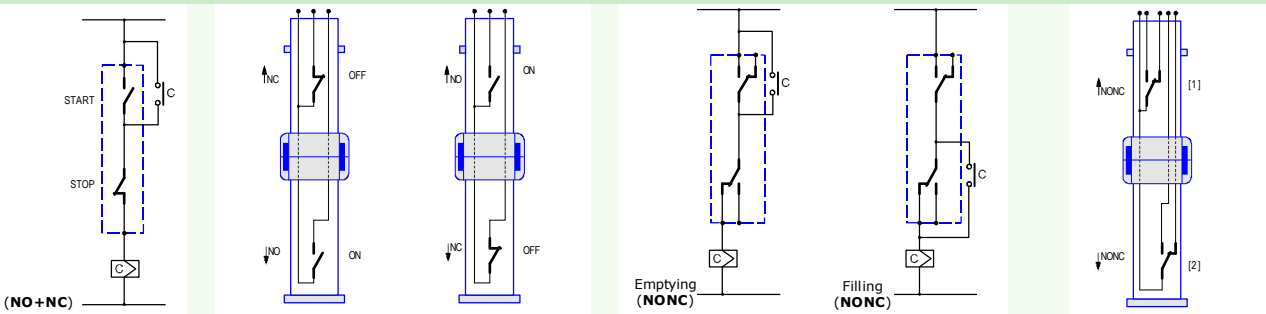


3 CONTACTS

START-STOP EMPTYING + LEVEL MINIMUM ALARM

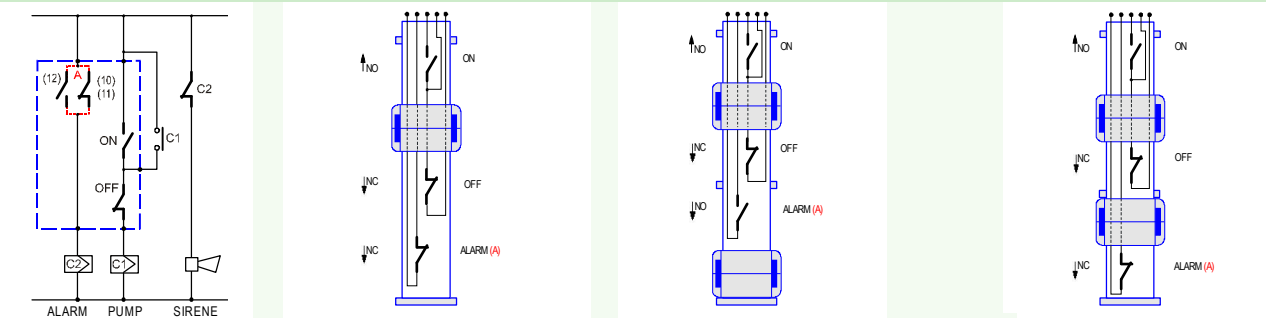


4 CONTACTS

START-STOP FILLING + OVERFLOW ALARM

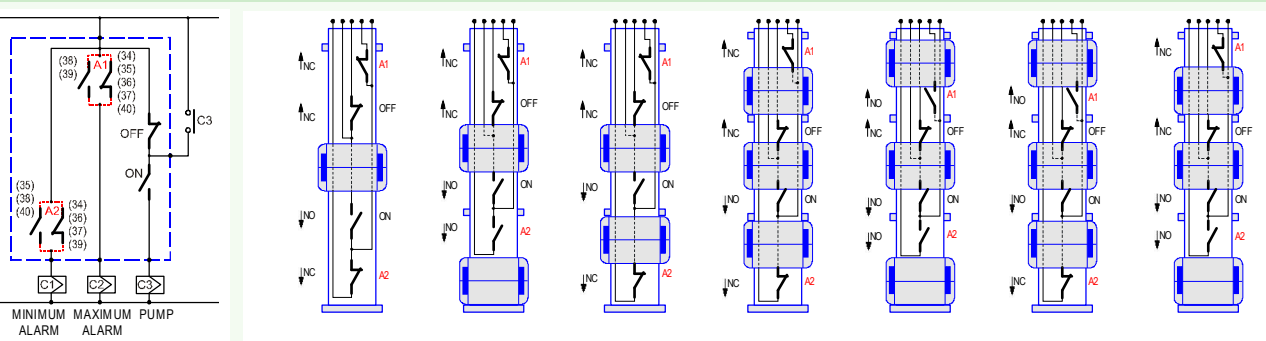

5 CONTACTS

INDICATION or CONNECTION to PLC

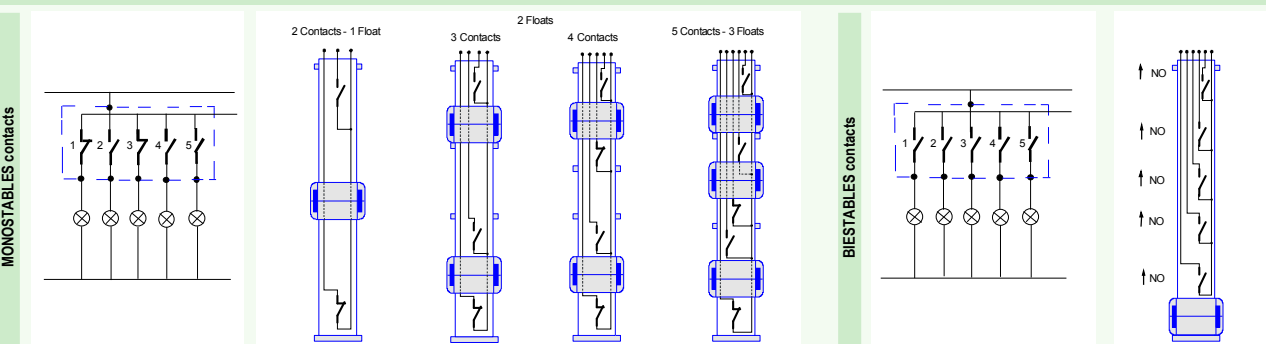

More related information in "Utilities / Tables" on our website (www.disibeint.com)